

| PARTS NO. | DESCRIPTION | Q'TY |
|-------------|----------------------------|------|
| 41004-01320 | Valve stem | 60 |
| 41028-02200 | DISTRUBUTOR | 7 |
| F8006-06206 | BALL BEARING | 15 |
| 41028-02100 | SHAFT ROTATING SENSOR SEAT | 1 |
| F8006-06205 | BALL BEARING | 12 |
| 41045-03600 | WATER PUMP SEAL | 30 |
| 41061-06900 | valve relief | 6 |
| 41004-01803 | guide tappet | 40 |
| 41601-08900 | accumulator | 16 |
| 41045-02500 | shaft | 17 |
| 04526-56000 | thermo. couple | 11 |
| 37563-07100 | element oil filter | 12 |
| 41019-00201 | bushing piston pin | 6 |
| 41004-00600 | spring valve | 144 |
| 41007-22000 | bush seal | 167 |
| 41035-10300 | oil pump gear | 1 |
| 41035-10400 | oil pump gear | 1 |
| 41004-11500 | roller tapet | 34 |
| 41004-01170 | shaft | 9 |
| 41046-00902 | water pipe | 3 |
| 41011-02100 | oil seal | 6 |
| 41045-02401 | water pump rotor | 1 |
| 41205-02600 | gasket | 1 |
| 45951-40320 | oil pipe connector | 1 |
| 41007-22500 | gasket | 4 |
| 49128-81001 | gasket | 5 |
| 41061-05301 | fuel pipe | 7 |
| 41018-10200 | liner rim | 23 |
| 41007-04600 | rubber cap | 48 |
| 41025-02600 | gasket | 2 |
| 41001-07100 | cylinder cover | 4 |
| 04525-20100 | control switch | 1 |
| 49125-80000 | turbocharger repaur kit | 3 |
| 41060-23001 | fuel deliver seat | 3 |
| 41025-02100 | gasket | 5 |
| 41120-00200 | gear | 1 |
| 41013-10400 | gasket | 1 |
| 41011-11800 | gasket | 6 |
| 41035-00600 | oil pump gasket | 6 |
| 41020-10900 | oil seal seat | 5 |
| 49128-81001 | gasket | 1 |
| 37711-04300 | front shaft seal | 7 |
| F8010-06308 | bearing | 49 |
| 41019-60300 | con rod bolt | 16 |
| 41019-00800 | con rod nut | 8 |
| 41001-02601 | exhaust air pipe | 48 |
| 41001-12600 | exhaust air pipe | 24 |
| 41001-05601 | intake air pipe | 40 |

| | | |
|----------------------|--------------------------|-----|
| 41001-03700 | exhust air pipe | 39 |
| 41004-03900 | valve cover | 303 |
| 41406-02801 | Thermostat | 6 |
| 14118-55621 | Plunger | 35 |
| 41065-17012 | deliver valve | 38 |
| 41062-00010 | oil filter | 18 |
| 41017-20020 | piston ring | 48 |
| 41009-20010 | main bearing | 34 |
| 04527-04800 | hydraulic switch | 2 |
| 41010-08200 | sleeve | 4 |
| 41010-00401 | cylinder liner seal ring | 42 |
| 41032-02100 | exhaust seal rim | 18 |
| 41233-01900 | exhaust seal ring | 6 |
| 41039-01300 | gasket | 10 |
| 41233-01800 | turbocharger rim | 9 |
| 47220-47900 | air pressure gun | 4 |
| 41007-02100 | water pipe connector | 48 |
| 41040-05300 | oil filter | 4 |
| 41035-00500 | gear | 1 |
| FSBB839DAP 103-40057 | Flowmeter | 5 |
| 41028-00500 | gasket | 3 |
| 41039-01300 | gasket | 3 |
| 41004-12701 | Valve cover pad | 161 |
| 41046-22301 | Thermostat 65.C | 3 |
| F8046-22314 | Universal bearings | 6 |
| 41004-00300 | Valve lock | 54 |
| 41025-02600 | gasket | 2 |
| | lub oil fuel filter | 23 |
| 41004-08400 | exhaust valve | |
| F1004-05102 | intake valve | 24 |
| 45R46-40110 | Thermostat 76.5.C | 12 |
| 45R46-40110 | Thermostat 60.C | 2 |
| 41001-00400 | exhaust valve seat rim | 140 |
| 41001-00500 | exhaust seat ring | 12 |
| 41146-00601 | water pipe connector | 9 |
| 41001-20200 | nozzle sleeve | 42 |
| 41406-00702 | anti vibration hose | 2 |
| 41045-03500 | water pump shaft | 5 |
| 37435-11600 | sleeve | 80 |
| F3153-29000 | rubber ring | 105 |
| F8046-22308 | bearing | 49 |
| 41004-11601 | sleeve | 96 |
| 41009-12100 | crankshaft push rod | 12 |
| 41046-00702 | water pipe connector | 7 |
| 41004-00901 | sleeve | 78 |
| 41001-05502 | intake seat rim | 82 |
| 41146-00601 | | 3 |
| 41032-08302 | exhaust pipe connector | 28 |
| 41019-20010 | con rod bearing | 48 |

| | | |
|-------------|----------------------|-----|
| 04286-45030 | water pipe connector | 20 |
| 41011-02300 | oil seal | 5 |
| 41004-08400 | exhaust valve | 126 |
| 41004-05102 | intake valve | 132 |